

Operation Guide



User Manual 8105-FMT

1. Keypad instructions

- Press "0-9" buttons for codes
- Press "*" for return or deletion
- Press "#" for confirmation or wake up
- There is a reset button on the back panel
- When lock is in sleep model, touch keypad, press two keys lighting blue, wake up the lock.

2. Quantity of card, code user

- Master code: 1pcs (6-8 digits, default master code is 123456)
- Card user : 100pcs , index no. is 001-100
- Code user: 100pcs , index no. is 001-100


3. Unlock method

- Code, card, card + code, mechanical key;


4. Door lock setting introduction

4.1. Change Master Code

Change the default master code

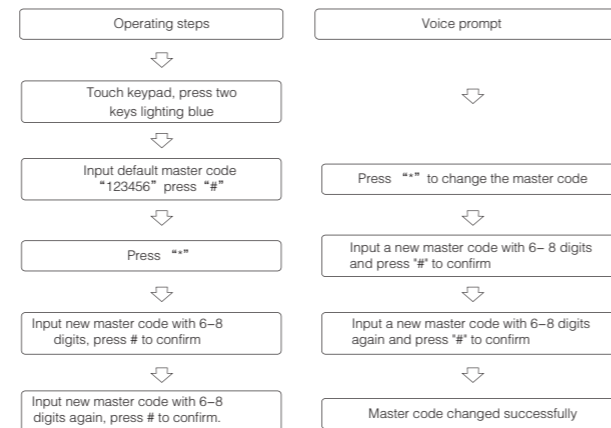


Change the default master code

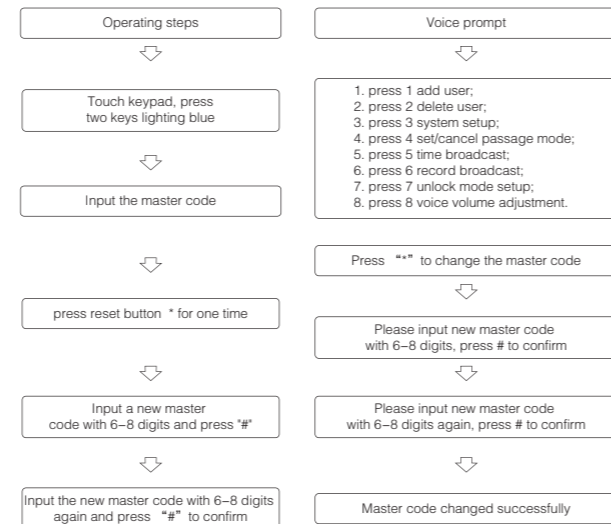

- Card, code can only be added after the factory default master code modified.
- New master code should be different with the default master code.
- When modify default master code, the first input code should be same with the second input code.

4.2 Add User Card


Add User Card

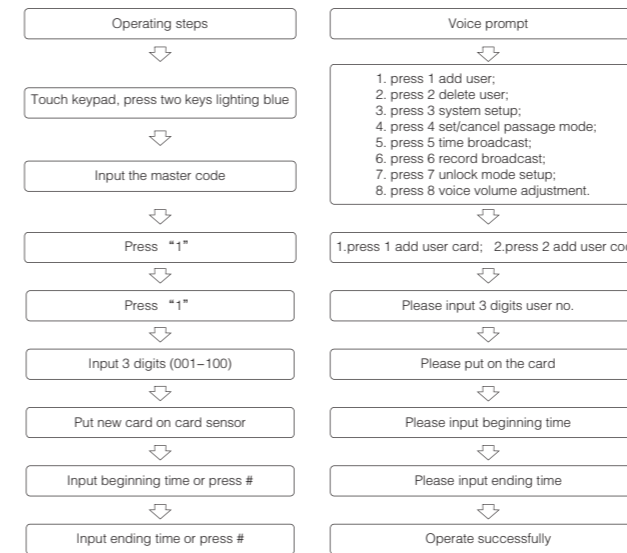

- Notes:
- In the card adding status, you can add more card users continually.
 - If you don't want card user with time restriction, please don't input time, press "#" directly.

4.3 Add User code


Add User code

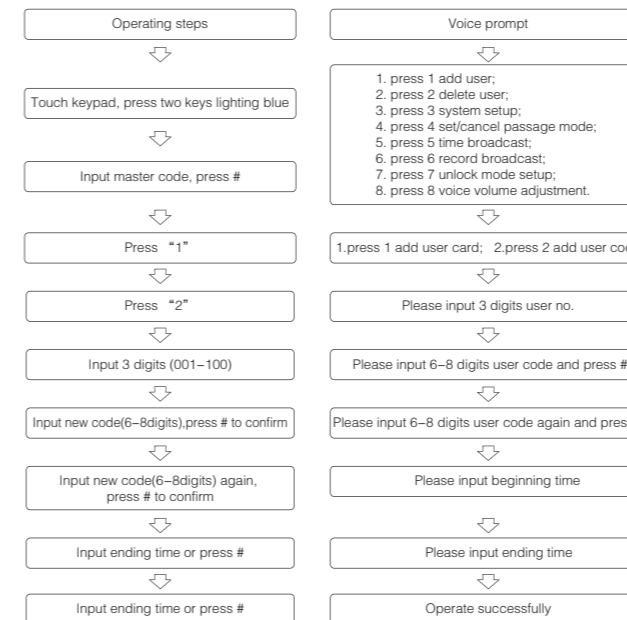

- Notes:
- In the user code adding status, you can add more code users continually.
 - If you don't want code user with time restriction, don't input time, press "#" directly.

4.4 Delete User Card


Delete User Card

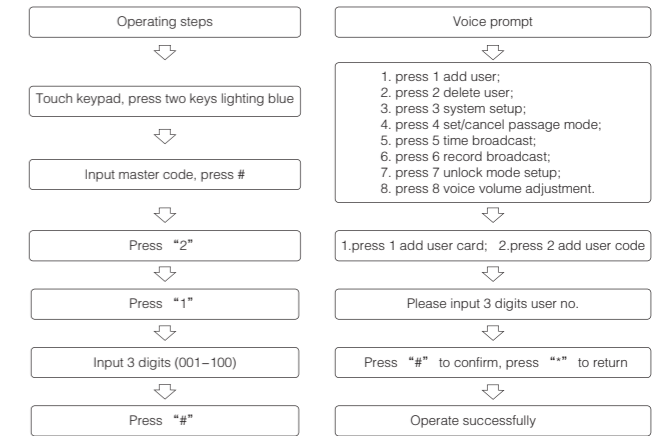

- Notes:
- In the card deleting status, you can delete more card users continually.


4.5 Delete User code

Delete User code

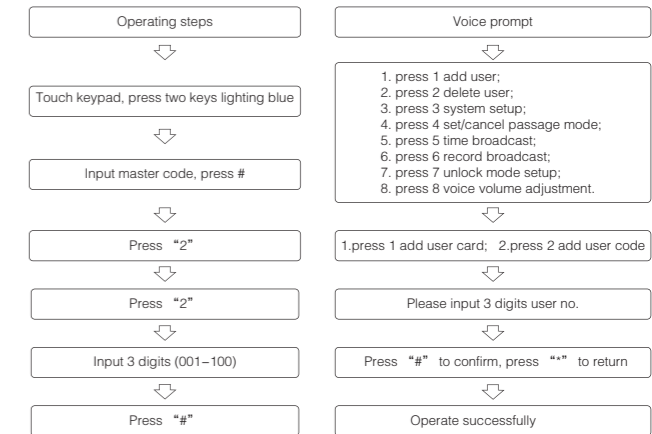

- Notes:
- In the password delete status, you can delete more user code continually.

Packing list

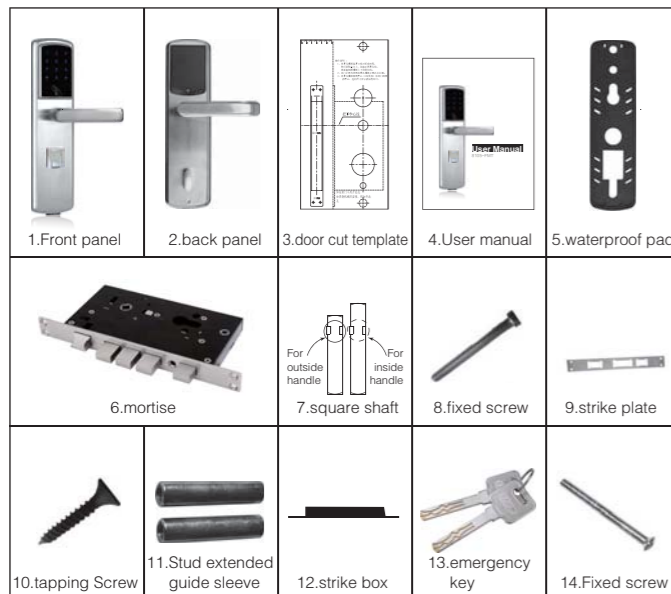


5. Unlocking way

5.1 Unlock with card




5.2 Unlock with user code

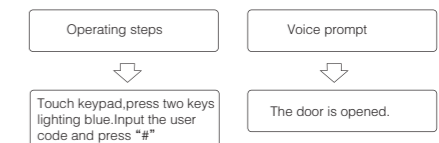


6. Door lock system setup


6.1 Door lock clock setup

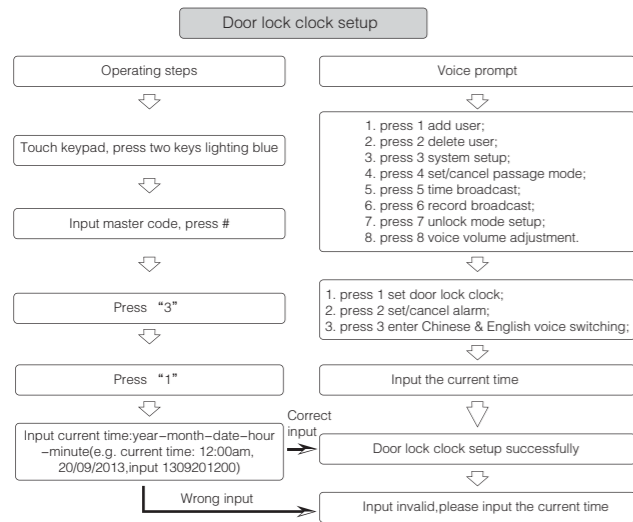


6.2 Door lock alarm setup/cancel

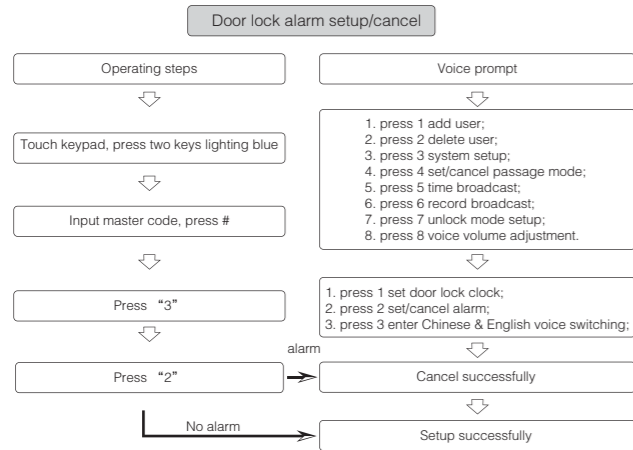


6.3 Chinese/English voice navigation switching

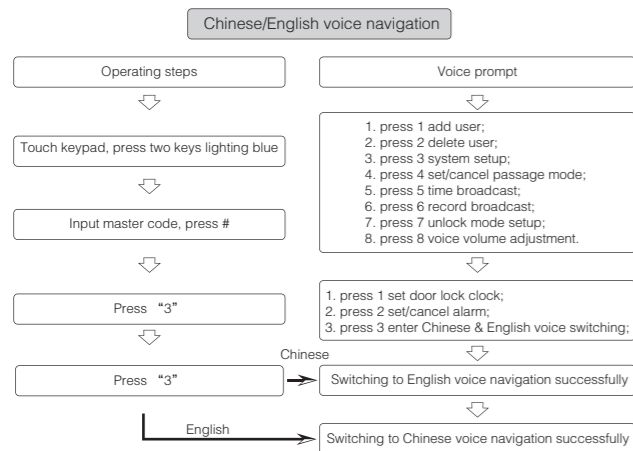


7. "Passage Mode" function setup/cancel

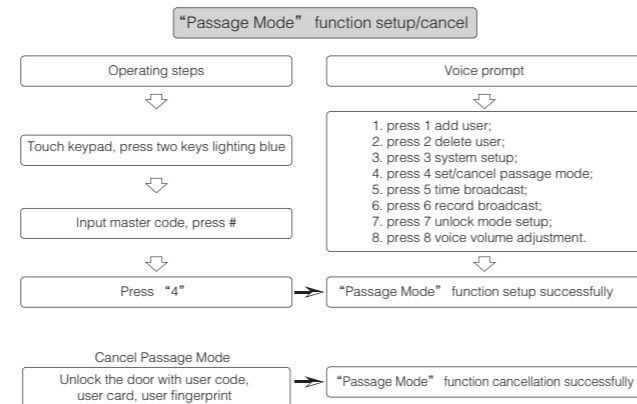


8. Door lock clock reporting

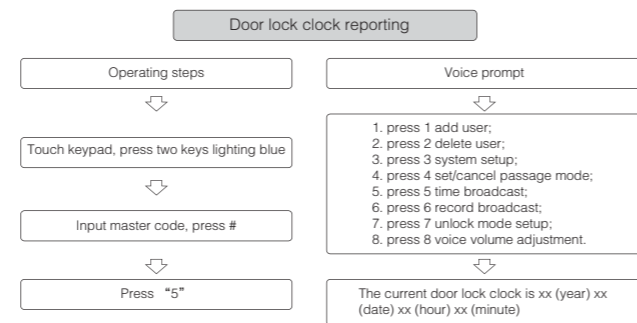

9. Door lock event record reporting

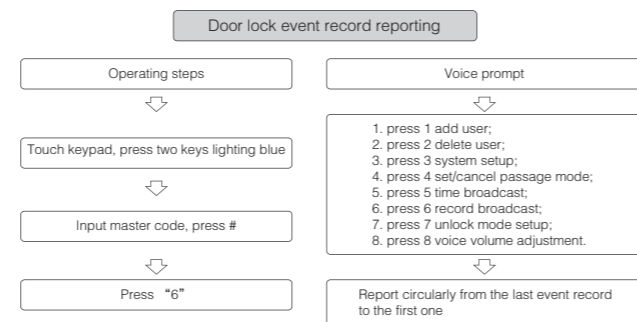


10. Door unlocking mode setup

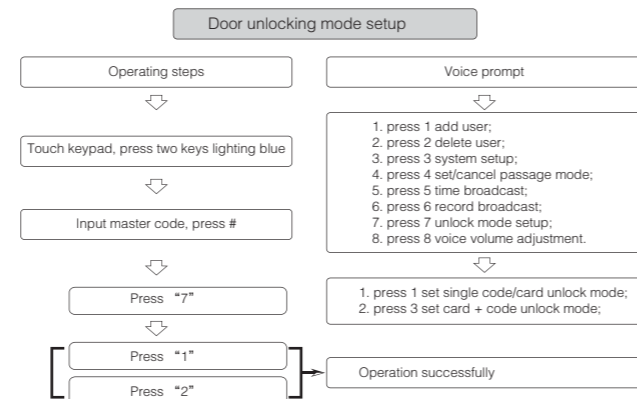

After setting, it just can be unlocked with the setting mode. For example, it set with card+code unlock mode, it cant unlock with code/card unlock mode. But it can be unlocked by Master code.

11. Voice volume adjustment

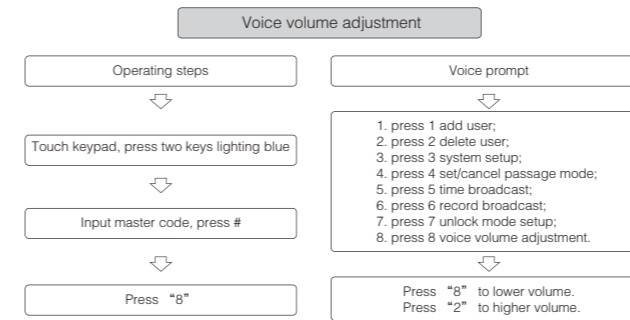

12. Restore factory defaults setting



Notes:

- After the default master code is restored, it must be changed before user adding or deletion.
- After factory defaults are restored, the previously user cards/user codes will be deleted.


13. Malfunction prevention function

When 5 failed authentication attempt with unregistered code/fingerprint occur, the lock stops operating for 3 minutes.

14. Low battery alarm function

4 pieces AA Alkaline battery(6V), when battery voltage is lower than 5.0V, the door lock will sound a voice prompt "Low battery. Replace it".

15. Battery box & reset button

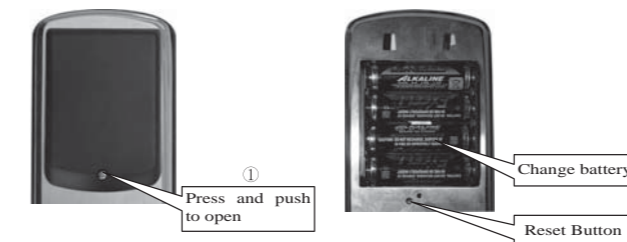

16. External power contact



17. Change the mortise direction.



Use the screwdriver to push the latch pole out and keep it, then rotate the latch to change the direction